

Cloud 46-120 Jumper Settings



Ref	Description	Default	Location	Effect
J1	Mic1 Phantom	OFF	Main Board	OFF: MIC 1 phantom power OFF ON: MIC 1 phantom power ON
J2	Mic2 Phantom	OFF	Main Board	OFF: MIC 2 phantom power OFF ON: MIC 2 phantom power ON
J3	Zone1 65 Hz High Pass Filter	OFF	Main Board	OFF: full frequency response ON: 65 Hz hi-pass filter enabled for Zone 1
J4	Zone2 65 Hz High Pass Filter	OFF	Main Board	OFF: full frequency response ON: 65 Hz hi-pass filter enabled for Zone 2
J5	NO/MC Mute Contacts	N/O	Main Board	N/O: contact closure required for muting N/C: contact opening required for muting
J6	Mic Over Music Priority	ON	Mic Control Sub-Board	OFF: No priority – mics mix with music ON: Music ducks when mics in use
J7	Mic Over Facility Input Priority	OFF	Main Board	OFF: No priority ON: MIC 1 & 2 have VOX-triggered priority over signals at facility port
J8	Zone 3 65 Hz High Pass Filter	OFF	Main Board	OFF: full frequency response ON: 65 Hz hi-pass filter enabled for Zone 3
J9	Zone 4 65Hz High Pass Filter	OFF	Main Board	OFF: full frequency response ON: 65 Hz hi-pass filter enabled for Zone 4
J10	Mic 1, Zone 1 Access Bypass	ON	Main Board	PRESENT: Mic 1 has permanent access to Z1 ABSENT: Use access port to enable access to Z1
J11	Mic 1, Zone 2 Access Bypass	ON	Main Board	PRESENT: Mic 1 has permanent access to Z1 ABSENT: Use access port to enable access to Z2
J12	Mic 1, Zone 3 Access Bypass	ON	Main Board	PRESENT: Mic 1 has permanent access to Z1 ABSENT: Use access port to enable access to Z3
J13	Mic 1, Zone 4 Access Bypass	ON	Main Board	PRESENT: Mic 1 has permanent access to Z1 ABSENT: Use access port to enable access to Z4
J14A, B3	Zone 1 Line 6 Priority	OFF	Music Control Sub-Board	OFF: No priority ON: Line 6 has VOX-triggered priority over other sources in Zone 1
J15	Zone 1 LINE 6 Priority Release Time	6S	Line Input Sub-Board	3S: 3 seconds. release time 6S: 6 seconds release time ABSENT: 12 seconds release time
J16	MOH/Utility Source Select	Z1	Music Control Sub-Board	L1: MOH/Utility output always Line 1 input L2: MOH/Utility output always Line 2 input L3: MOH/Utility output always Line 3 input L4: MOH/Utility output always Line 4 input L5: MOH/Utility output always Line 5 input L6: MOH/Utility output always Line 6 input MP3: L1: MOH/Utility output always media player2 Z1: MOH/Utility output follows Zone 1 selection
J17A, B, C	MIC I/TEL Input Transformer	OFF	Main Board	OFF: MIC 1 input accepts standard mics ON: MIC 1 input suitable for connection to telephone system
J18A, B, C	Auto Power Down Time	OFF (APD Disabled)	Main Board	Binary weighting applies: see table at page 25.

General Notes:

1. On models 46-120T and 46-120TMEDIA, default setting is ON.
2. Operative on Models 46-120MEDIA and 46-120TMEDIA only.
3. All jumpers in the set must be moved together.

Cloud Electronics Limited

140 Staniforth Road, Sheffield, S9 3HF, England
Telephone: +44 (0)114 244 7051 Fax: +44 (0)114 242 5462
Web: www.cloud.co.uk E-mail: info@cloud.co.uk

Cloud Electronics USA

1200 Iron Horse Drive
Unit A, Park City, Utah 84060, United States of America.
Toll Free: 0855 810 0161
Web: www.cloudusa.pro E-mail: sales@cloudusa.pro