

Cloud 24-120 & 24-240 Jumper Settings



Ref	Description	Options	Default	Location	Notes
J1	Utility output music source	Z1 / L1	Z1	Main Board	
J2	Music Mute N/O or N/C	N/O / N/C	N/O	Main Board	
J3	Facility port audio routing	Z1 / ALL	Z1	Main Board	Routes Facility audio to Zone 1 only or both zones
J4	Mic over facility priority	EN / DIS	DIS	Main Board	
J5	Zone 1, source (force front panel)	SW / FR	SW	Main Board	Set to FR when using a RL-1
J6	Zone 1, remote port type	RSL-4 / RSL-6	RSL-4	Main Board	
J7	Zone 2, source (force front panel)	SW / FR	SW	Main Board	Set to FR when using a RL-1
J8	Zone 2, remote port type	RSL-4 / RSL-6	RSL-4	Main Board	
J9	Phantom power enable	ON / OFF	OFF	Mic Input	+12V phantom power
J10	APD enable		Fitted	Main Board	Remove to enable APD mode
J11	Zone 1, Line 4 priority	EN / DIS	DIS	Main Board	Enable Line 4 priority in Zone 1
J12	Zone 2, Line 4 priority	EN / DIS	DIS	Main Board	Enable Line 4 priority in Zone 2
J13	Test	ON / OFF	Absent	Main Board, Front-RHS	Factory use only
J14	Boot	ON / OFF	Absent	Main Board, Front-RHS	Factory use only
J15	MVM	ON / OFF	Absent	Main Board, Front-RHS	Factory use only

General Notes:

- All power to the unit must be removed before removing the top panel
- All jumpers in a set must be moved together

Cloud Electronics Limited

140 Staniforth Road, Sheffield, S9 3HF. England
 Telephone: +44 (0)114 244 7051
 Web: www.cloud.co.uk E-mail: info@cloud.co.uk

Cloud Electronics USA

1960 Sidewinder Drive, Suite 211, Park City,
 Utah 84060. United States of America.
 Tel: +1 435 640 2474
 Web: www.cloudusa.pro E-mail: sales@cloudusa.pro