

## Cloud 46-120MK2 & 46-240 Jumper Settings



Ref	Description	Options	Default	Location	Notes
J1	Mic 2 Phantom Power	ON / OFF	OFF	Upper Board	
J2	CDPM CANbus Termination	ON / OFF	ON	Upper Board	
J3	Music Mute N/O or N/C	NO / NC	NO	Main Board	
J4	-	-	-	-	Not present on the PCB
J5	Facility Port 1 Routing	Z1 / Z1&Z3	Z1	Upper Board	Facility Port 1 can feed Zone 1 only, or both Zones 1 & 3. J7 should be OFF for this jumper to take effect
J6	Zone 2 Line 6 Priority	ON / OFF	OFF	Upper Board	
J7	Facility Port 1 All Zones	ON / OFF	OFF	Upper Board	Facility Port 1 is routed either to the zones determined by J5 (OFF), or all zones (ON)
J8	Facility Port 2 Routing	Z2 / Z2&Z4	Z2	Upper Board	Facility port 2 is routed to Zone 2 only, or Zones 2 & 4
J9	Mic 1 Phantom Power	ON / OFF	OFF	Upper Board	
J10	Disable APD	FITTED / NOT FITTED	FITTED	Upper Board	
J11	Zone 1 Line 6 Priority	ON / OFF	OFF	Upper Board	
J12	Zone 3 Line 6 Priority	ON / OFF	OFF	Upper Board	
J13	Zone 4 Line 6 Priority	ON / OFF	OFF	Upper Board	
J14	APD Test Mode	FITTED / NOT FITTED	NOT FITTED	Upper Board	Factory Use Only
J15	Bootloader	FITTED / NOT FITTED	NOT FITTED	Upper Board	Factory Use Only
J16	NVM Reset	FITTED / NOT FITTED	NOT FITTED	Upper Board	Factory Use Only
J17	Global Mic over Facility Priority	ON / OFF	OFF	Upper Board	
J18	Global Mic 1 over Mic 2 Priority	ON / OFF	OFF	Upper Board	
J19	Aux 1 source	Z1 / Z3	Z1	Upper Board	
J20	Aux 2 source	Z2 / Z4	Z2	Upper Board	
J21	Aux 1 Level	TRACK / FIXED	TRACK	Upper Board	Auxiliary 1 output can be taken pre- or post- the zone music level control.
J22	Aux 2 Level	TRACK / FIXED	TRACK	Upper Board	Auxiliary 2 output can be taken pre- or post- the zone music level control.
J23	Utility Music Source	Z1 / LINE1	Z1	Upper Board	Utility output can follow the source selection of Zone 1, or always use the Line 1 source
J24	Utility Mic Over Music Priority	OFF / ON	OFF	Upper Board	Controls whether Mic signals mixed into the Utility Output will duck the Utility Music signal
J25	Speaker 3 Routing	Z1 / Z3	Z3	Upper Board	Speaker output 3 uses Zone 3 or Zone 1 preamp signal
J26	Speaker 4 Routing	Z2 / Z4	Z4	Upper Board	Speaker output 4 uses Zone 4 or Zone 2 preamp signal

### General Notes:

- All power to the unit must be removed before removing the top panel

### Cloud Electronics Limited

140 Staniforth Road, Sheffield, S9 3HF. England

Telephone: +44 (0)114 244 7051

Web: [www.cloud.co.uk](http://www.cloud.co.uk) E-mail: [info@cloud.co.uk](mailto:info@cloud.co.uk)