

## Cloud PM4, PM8, PM12 & PM16 Jumper Settings

Ref	Description	Default	Location	Notes
<b>Chime Select</b>				
J1	Chime Select; +1	ON	Front right	This group of jumpers are binary weighted. All off = chime off (0+0+0). J1 only ON = chime 1 (0+0+1), J2 only ON = chime 2 (0+2+0), J1 and 2 = chime 3 (0+2+1) J3 only ON = chime 4 (4+0+0)
J2	Chime Select; +2	OFF	Front right	
J3	Chime Select; +4	OFF	Front right	
J4	Digital Paging Interface termination	ON	Front right	
J5	Chime On/Off	ON	Mid	
J6	Internal Chime On/Off	ON	Mid	
J7	NVM Reset	OFF	Mid Block of 8	
J8	High Priority	OFF	Mid Block of 8	
J9	Lock Groups	OFF	Mid Block of 8	
J10	Auto-reset zone selection	ON	Mid Block of 8	
<b>Zone Offset</b>				
J14	Zone Offset; +1	OFF	Mid Block of 8	This group of jumpers are binary weighted. All off = offset of 0 (0+0+0+0). All on = offset of 15 (i.e. 8+4+2+1)
J13	Zone Offset; +2	OFF	Mid Block of 8	
J12	Zone Offset; +4	OFF	Mid Block of 8	
J11	Zone Offset; +8	OFF	Mid Block of 8	

All jumpers are located on the main PCB