

## Cloud PM4-SA & PM8-SA Jumper Settings

Ref	Description	Default	Location	Notes
	<b>Chime</b>			
J1	Pageing Chime Enable	ON	Front right block of 3	
J2	Message Chime Enable	ON	Front right block of 3	
J3	Message Chime File Select	C_1.mp3	Front right block of 3	Select from C_1 or C_2. NB Groups are programmed with any available chime overriding this jumper.
J4	Digital Paging Interface termination	ON	Front right	
J6	Internal Chime/ Message On/Off	ON	Mid	
J7	NVM Reset	OFF	Right mid block of 4	
J8	High Priority	OFF	Right mid block of 4	
J9	Lock Groups	OFF	Right mid block of 4	
J10	Auto-reset zone selection	ON	Right mid block of 4	
	<b>Zone Offset</b>			
J11	Zone Offset: +8	OFF	Centre mid block of 4	This block of jumpers are added together to give a binary weighted zone offset of 0 to 15.
J12	Zone Offset: +4	OFF	Centre mid block of 4	
J13	Zone Offset: +2	OFF	Centre mid block of 4	
J14	Zone Offset: +1	OFF	Centre mid block of 4	
	<b>Message Terminal Config</b>			
J20	M1,M2 ON=NC, OFF = NO	OFF	Mid block of 2	Message terminals can be Normally Closed (NC ) or Normally Open (NO)
J21	M3,M4 ON=NC, OFF = NO	OFF	Mid block of 2	
J22	M5...M8 ON=NC, OFF = NO	OFF	Mid left block of 2	
J23	Enable Message Cancel	OFF	Mid left block of 2	When Cancel, is enabled messages and chimes are unlimited. When Cancel is disabled messages are limited to 120s, chimes to 4s.

All jumpers are located on the main PCB