

## Adding an Extension RSL-6 to an LM-2

This configuration allows for the Remote Source & Volume Selector (RL-1 or RSL-6) to be Extended (and disabled) from the LM-2 to say a Main Reception or other overriding control point. Its ideal for Conference Applications where the Active Input needs monitoring.

