

## MPA120MK2-MPA240MK2 AUX Output Structure

**Q:** Is it possible to have the Auxiliary Output affected by the Source Selection but with a Constant Level, so not affected by the level of the main output?

**A:** Unfortunately there is no way to achieve this. To fix the level of the Auxiliary Output, the Music Source must be fixed to LINE 1 Input. This is done through Jumper J9. When set to TRACK, the Music Level also affects the level of the Auxiliary Output.